

Aquasol®

WATER SOLUBLE PAPER AND TAPE



DISSOLVABLE PURGE GAS BARRIER FOR TIG WELDING

FEATURES

Low Air Permeable Purge Gas Barrier for Any Pipe Diameter

- Excellent Barrier For Retaining Noble Gas (Argon and Argon/Helium Mix)
- Wide Range of Sizes and Grades Permitting Construction of Any Pipe Diameter

Biodegradable, Safe & Easy Removal

- Made of Sodium Carboxy Methyl Cellulose & Wooden Pulp
- Effortlessly Dissolves During Water or Steam Hydro-test
- 100% Biodegradable Leaving No Residue In The Pipeline
- Safe for Nuclear, Petrochemical, Food, Beverage & More

Aquasol®

WATER SOLUBLE PAPER AND TAPE

WHAT IS AQUASOL® WATER SOLUBLE PAPER?

Aquasol® Water Soluble Paper provides a convenient and cost effective method for creating purge chambers for pipe welding.

How Does It Work?

Aquasol® Water Soluble Paper is simply cut to shape, folded and taped to each side of the pipe. It creates a barrier for inert gases such as argon and helium. Once the weld is complete, the pipe is flushed with water or steam and the Aquasol® Water Soluble Paper dissolves instantaneously.

Does It Work in Any Water Temperature?

Yes, Aquasol® will dissolve in either hot or cold water. However, the rate of dissolvability increases as the temperature of the water increases.

How Do I Achieve a Perfect Seal?

Aquasol's Water Soluble Tape is engineered in such a way that it will allow the user to place the dam in the proper position before maximizing the adhesive seal. The strength of the "tack" or stickiness of the adhesive allows the user to have control and reposition the dam if not properly placed on the first attempt. Once the dam is positioned, the user can increase adhesion by reactivating the adhesive on the tape portion of the dam and form a tight seal as illustrated below:

Activate the Water Soluble Tape



Moisten an ordinary sponge in water. Squeeze out excess water.



Lightly dab sponge along the water soluble tape portion of the dam.



The dampened sponge will reactivate the adhesive to ensure zero air permeability.

HOW TO CREATE AN AQUASOL® WATER SOLUBLE PURGE DAM



1

TRACE & IMPRESS

Trace pipe's inner diameter. Create an impression of the pipe. Fold to form 90° angle.



2

CUT

Cut the circle 1.3 times greater than pipe diameter.



3

SLIT

Slit approximately 1" to 2" segments perpendicular to impression on paper.

Make first slit at 12 o'clock position followed by 3 o'clock, 6 o'clock and so on.



4


POSITION PIPE & TAPE IN PLACE

Cut Aquasol® Water Soluble Tape into pieces and secure in place.

5

REPEAT

Repeat process on other side.

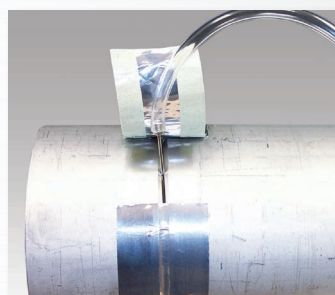

- Cover root gap with EZ Zone® Tape.
- Your set up is complete.
- Introduce argon via the root gap.

Recommended Proximity To Weld Joint

PIPE DIAMETER		RECOMMENDED DISTANCE	
ENGLISH	METRIC	ENGLISH	METRIC
2" - 8"	51 - 203 mm	6"	152 mm
10" - 22"	254 - 559 mm	8"	203 mm
24" - 36"	610 - 914 mm	12"	305 mm

SPECIFICATIONS


Aguasol® Purge Paper and Purge Tape: Types and Sizes

ITEM NO.	THICKNESS	DIMENSIONS		TYPE	CASE PACK
		ENGLISH	METRIC		
200.ASW-35/S-112RW	.0035"	8 ½" x 11"	22 cm x 28 cm	Sheet	1,000 sheets/ream
200.ASW-35/S-14R	.0035"	8 ½" x 14"	216 mm x 355 mm	Sheet	500 sheets/ream
200.ASW-35/S-22R	.0035"	17" x 22"	431 mm x 559 mm	Sheet	500 sheets/ream
200.ASW-60/S-22R	.0070"	15 ½" x 22"	394 mm x 559 mm	Sheet	250 sheets/ream
200.ASW-35/R-9	.0035"	9" x 165'	23 cm x 50 m	Roll	4 rolls/case
200.ASW-35/R-15	.0035"	15 ½" x 165'	39 cm x 50 m	Roll	4 rolls/case
200.ASW-40C/R20.5	.0050"	20 ½" x 165'	52 cm x 50 m	Roll	4 rolls/case
200.ASW-60/R-15	.0070"	15 ½" x 165'	39 cm x 50 m	Roll	4 rolls/case
200.ASW-60/R-31	.0070"	31" x 165'	79 cm x 50 m	Roll	4 rolls/case
200.ASWT-1	N/A	1" x 300'	2.5 cm x 92 m	Roll	24 rolls/case
200.ASWT-2	N/A	2" x 300'	5 cm x 92 m	Roll	12 rolls/case

Selecting The Proper Grade

200.ASW-35	Use for pipes having 4" inner diameter or less
200.ASW-40C	Use for greater gas retention
200.ASW-60	Use for pipes having 4" inner diameter or greater
200.ASWT	Use in addition to water soluble paper for pipes greater than 2" in diameter

For additional product information,
quotations and ordering, please contact:

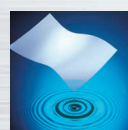

Aguasol Corporation

80 Thompson Street
N. Tonawanda, NY 14120 USA

Toll Free: 1.800.564.WELD (9353)
Phone: 716.564.8888
Fax: 716.564.8889

Email: info@aquasolcorporation.com
aquasolwelding.com

Distributed By:

Lascentrum
welding & cutting

WWW.LASCENTRUM.COM
INFO@LASCENTRUM.COM
PHONE: +31 (0)78 642956
FAX: +31 (0)78 6429686



American Welding Society
Sustaining Company Member



MADE IN THE USA